

CXP-ARK MANUAL & BEAGAME CHANGER ICS AIRSOFT




各部零件說明 Description

■ ICS-131

※紅色的零件號碼爲SSS版本用件 The part numbers in red are for SSS V3 version. *每一款槍型基本配備不同依實際出貨為主。圖片僅供參考

The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

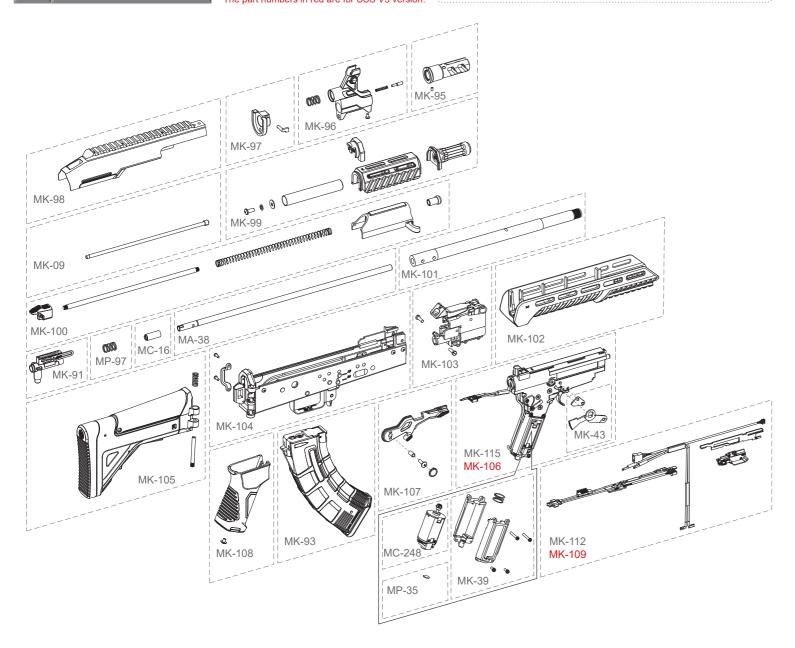

WARNING 警告

電槍使用之注意事項 Maintenance

- 以避免齒輪過度耗損。請使用通槍條將殘彈清除,或
- 位置上,將電池移除並定期使用通槍條清潔槍管。
- 4. 請依原廠附贈之保險絲規格使用。不當配置可能遵 致零件故障,槍內配置M100彈簧請用20A保險絲 M120彈簧請用25A保險絲。
- 5. 彈頭直徑6mm。其槍口動能為二焦耳以下、射程範圍
- 6 適用年齢為18歳以上
- 』 7. 使用本商品不得改造或變造,並不得使用金屬彈頭。 . 「此槍非玩具」,濫用可能造成嚴重傷害,尤其是眼 睛。使用時應確保本身及射程範圍內所有人員均已確
- 9. 使用方法及注意事項請詳閱説明書內容。
- 10. 建議使用以下電池以達到最大效益:
- SSS系統建議使用7.4v & 11.1v Li-Po電池。 傳統雷聞與FFT雷聞系統11 1v LiPo電池Ready。 ※使用非建議電池可能會造成產品效能低落、功能異
- (原產地:台灣/製造商:一芝軒企業有限公司/地址: 台中市神岡區東洲路79巷67號 / 電話: 04-25256461)

- 1. 請勿使用劣質或回收BB彈,以減少槍管損耗及避免卡 1. To reduce the abrasion of inner barrel and to avoid BB jam, please do
- shooting immediately in case the gear abrades excessively. Use the 以避免齒輪過度耗損。請使用通館條將殘彈清除,或 檢測電池電量後方可繼續使用。 3. 不使用本產品時,請務必將射擊選擇鈕置於保險(S)的 位置上,將電池移除並定期使用通館條清潔艙管。 位置上,將電池移除並定期使用通館條清潔艙管。

 - 4. Please use the same fuse specification as the original one. Equipping improper fuse might cause malfunction to the components. Apply 20A fuse if the gun using a M100 spring; apply 25A fuse if using M120 spring.

 5. The diameter of the BB pellet is 6mm. The muzzle energy is less than two
 - joules, and the shooting range is within 50 meters.

 6. The recommended age to operate this product is 18 years old and above.

 7. Modify, reform, and using metal bullets on this product are strictly
 - 8. This is NOT a toy. Abusing might cause severe injuries, especially to the
 - eyes. Before operating, please make sure that every personnel in the shooting range have worn eye protections properly, including the operator 9. Please read the manual for instruction and precaution. 10. In order to achieve the maximum performance, the following batteries are

 - SSS system: 7.4v or 11.1v Li-Po batteries.
 Traditional switch and FET switch system: 11.1v Li-Po battery Ready. XUsing non-recommended batteries may cause poor performance,
 - Adding non-recommended between the product.

 Origin: Taiwan/ Manufacturer: ICS enterprise Co., Ltd / Address:
 No.67, Ln. 79, Dongzhou Rd., Shengang Dist., Taichung City 429, Taiwan / TEL: (+886) 4-2525-6461


































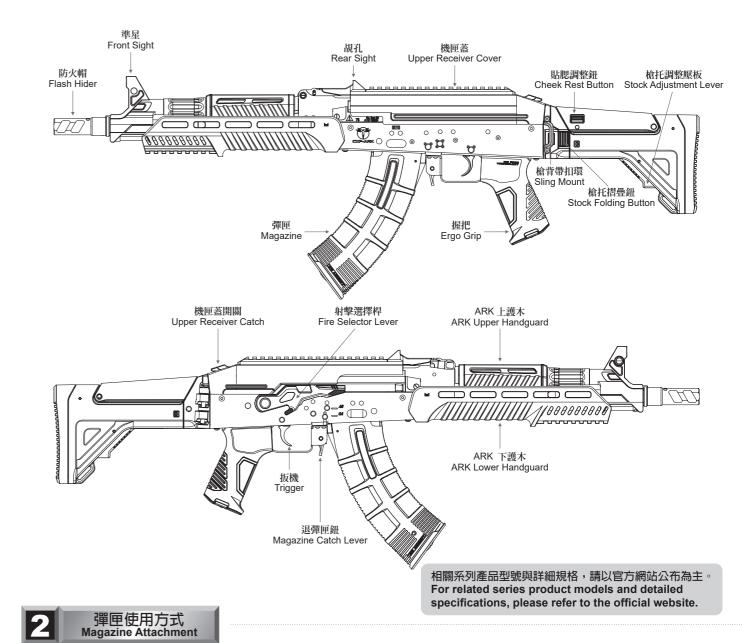




將彈匣上蓋依箭頭方向打開再倒入BB彈 Open the cover to load BBs.

限使用 6mm BB彈 Please use 6mm caliber BBs only.

依箭頭方向旋緊彈匣底下旋鈕或插入 3mm內六角扳手再依箭頭旋轉,即可將 BB彈順利袋出

Rotate the dial gear on the base plate, or with a 3mm allen key into the hole on the magazine housing as instructed to charge the BB feeding spring.

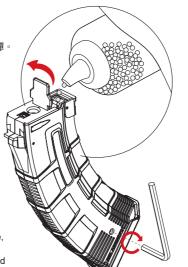




護木拆卸方式


Disassembling The Handguard




將上護木環固定鈕向上扳起。 Flip up the upper handguard fixing lever.

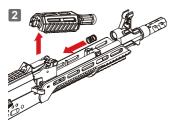


將上護木取出後,即可卸下彈簧。 Remove the upper handguard from the top, then remove the spring.

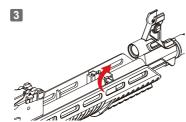

將下護木環固定鈕向上扳起。 Flip up the lower handguard fixing lever.

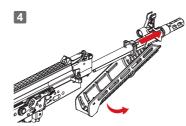

將下護木固定環向前拉,即可卸下下護木。 Push the lower handguard forward to remove

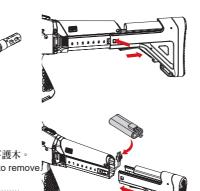

注意 重新組裝時,必須依反向動做組合 電池的拆裝方法 Battery Installation and Disassembly


 $\label{eq:Reasembling} \mbox{\ensuremath{\mbox{\mathbb{K}}}} \mbox{\ensuremath{\mbox{$Reassembling$}$}} \mbox{\ensuremath{\mbox{$\rm procedures.}$}}$

按下槍托調整壓板並拉至最後(卡楯所在位置)。 Press the stock adjustment lever and pull the stock to the end.

, 將槍托固定片向內壓後,即可將槍托取下,方便 安裝電池

Press the stock locking spring inward to remove the stock for easy battery installation.

將電池與線材定位好,再裝回槍托。 Arrange both battery and wires in position, then put the stock back

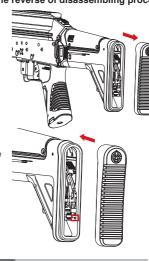

SSS. III

移除槍托橡膠底版。 Remove the buttplate.

將電池與線材定位好,同時注意燈號是否正常。 Arrange both battery and wires in position and make sure the LED light is right.


將尾蓋蓋回 Put the buttplate back.

3-2 SF1托 操作 SF1 Operation




按壓貼塞塊按鈕即可上下調整貼塞塊

Press the button to adjust height of cheek rest.

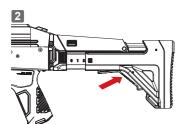

按壓槍托調整壓板即可前後調整拖塊

Press lower button to adjust stock lenath

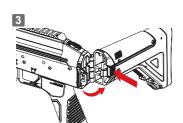


將槍托卡榫往內按壓脫離卡榫溝槽,即可往右 側折疊槍托。

Press the stock catch button to release it from the catch, and fold the stock to the right side.



 精確射擊調整動作 Precision Targeting Adjustment





- 1.壓下右側按鈕
- 2.將準星調整桿壓入後,將調整扭轉左即可升高準星; 將調整扭轉右即可降低準星
- 1. Press the button on the right side.
- 2. Press the adjustment tool into the front sight to adjust. Rotate counterclockwise to raise, and clockwise to lower the sight.





 






4 彈簧釋放 **Spring Releases** Mechanism





- 1.將上機匣蓋打開才可撥至彈簧釋放。 2. 槍上有彈匣的情況下,使用彈簧釋放功能會導致第一發雙彈射出或小便
- 彈是正常情形 3. 槍支使用完並且將彈匣卸下後,朝安全處打3~5發單發清除殘彈後即可 進行彈簧釋放
- ※彈簧釋放可以延長彈簧壽命,避免長期擠壓造成疲乏。
- *This product is equipped with a spring tension release mechanism.
- 1) Open receiver cover to release spring tension.
- 2) It is a normal condition that the gun might shoot a double shot, or a weak shot on your first shot after releasing spring tension with magazine
- 3) After playing and removing the magzine, fire 3~5 rounds in semi-auto mode towards safety directions to clean the remaining BBs inside the H-up chamber and then release spring tension.
- Spring release can extend the spring lifetime by avoiding spring fatigued from long time compression.




齒輪箱與槍身的取出與安裝 The Gearbox & Receiver Take Out / Install

注意 先卸彈匣跟電池,再進行拆解


*Unload the magazine and battery before you proceed to disassemble.




將彈匣卸下。 Remove the magazine.

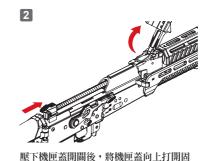


定在前。(需確實向前固定避免落下夾傷) Press the upper receiver catch to open the remove the charging handle set. upper receiver cover and keep it opening in the front. (Avoid the upper receiver falling from hands clipping)

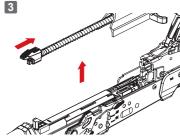

將機匣蓋開關向前推取出槍機拉柄組 Push the upper receiver catch forward to

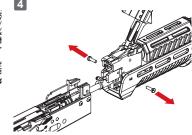

將槍管座螺絲卸下,並將槍身前段往前抽出。 Remove the barrel mount screws, and then pull the front assembly forward to remove.

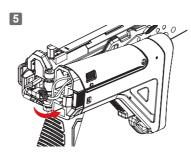

將槍托摺疊後,把線材抽出槍托。 Fold the stock and then and unplug

7-2 安裝齒輪箱




將握把與射擊選擇桿卸下。 Remove the Ergo grip and the fire selector Remove the gearbox upward to separate



將齒輪箱向上取出,即可與槍身分離。 it from the receiver.

3

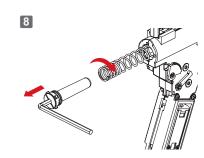


使用5mm六角扳手,將尾頂桿向內壓入轉至 45度即可將尾頂桿與彈簧一同抽出。 Use 4mm Allen Key, insert it to the spring guide and then press down to turn 45 degrees then take out the spring guide and spring.



注意 非必要時,手指請勿放置於H-UP調整處,避免受傷

 *To avoid injuries, only put your finger on the H-up adjustment when necessary.



- 1.將槍機拉柄往後拉到底並以射擊選擇桿固定在後
- 2. 視彈道進行撥片調整
- 3.調整完即開保險釋放槍機拉柄
- 1. Pull the charging handle to the rear and then hold it by the fire selector lever.
- 2. Push or pull the H-UP lever to adjust the trajectory.
- 3. When adjustment is completed, switch to semi to release charging handle.



When the BB pellet flies up: Push the H-UP lever forward to lower the trajectory.

When the BB pellet falls down: Push the H-UP lever backward to raise the trajectory.



Install Gearbox into Receiver.



※注意:裝入時請注意配合位置 Assemble the selector plate set as the image shown. * Attention: Please take extra caution to the coordinate positions while assembling.



